

## REDCAT ACCESS PRESENTER SET UP


**Remove Camera Mounting Shoe** from your camera tripod (not included). Set up the tripod and adjust the legs so that the tripod is stable and the Redcat Access, when attached, is approximately 6 - 7" from the floor.



**Attach Camera Mounting Shoe** to the RCMB bracket using the mounting hardware.



**Insert the bracket/shoe** assembly onto the tripod. Then **slide the Redcat Access** onto the bracket as shown.

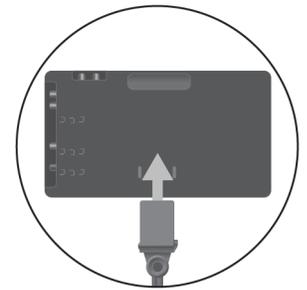

**If desired, remove the table stand** feet from the Redcat Access.




**If not using battery**, plug power supply into Redcat access and wrap the cord through the cable management slots to provide strain relief. If using battery pack, simply press power button to power on Redcat Access



# REDCAT ACCESS PRESENTER SET UP



## USING THE FLEXMIKE

1. Remove microphone from charger and place the microphone around your neck. If not using a lapel or earset, ensure the top of the microphone is at the collarbone. The boom of the earset should be close to your mouth. The lapel mic should be clipped as high as possible.
2. When using a lapel or earset microphone, plug the mic jack into the mic jack.
3. Press the power/mute button. The mic status will turn blue, indicating the microphone is active.
4. Microphone volume may be adjusted at the microphone by using the Up/Down buttons on the side of the Flexmike. It may also be adjusted by using the Microphone volume knob on the front of the Media Connector.

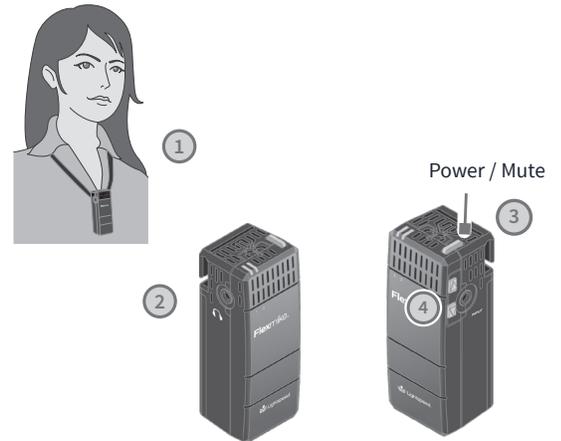

## USING THE OPTIONAL MEDIA CONNECTOR AS A WIRELESS AUDIO LINK

5. Plug the micro USB end of the power cable into the power adapter. Plug the other end of the cable into the micro USB port on the back of the Media Connector. Plug the USB1 into a wall outlet.
6. When powered on, the blue LED will glow.
7. Plug your external audio equipment (for example, laptop), into one of the input jacks on the back of the Media Connector labeled "Audio In" using a 3.5mm patch cable.
8. Adjust volume at the audio source. If necessary, further volume adjustment may be made using the Audio In volume control on the front of the Media Connector.
9. If no Media Connector is present, you may connect an audio source using a 3.5mm patch cable to the Audio In jack on the side of the Redcat.

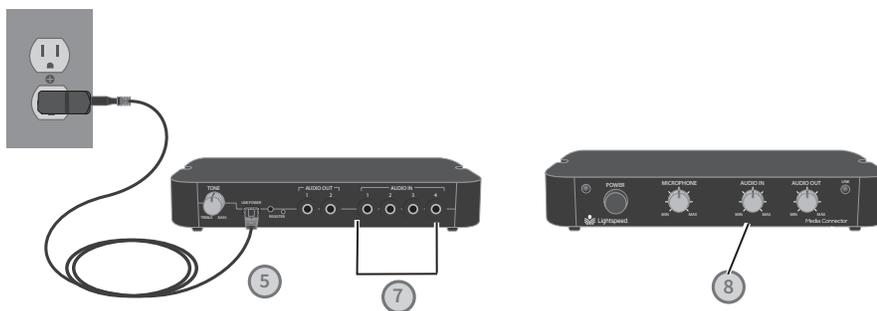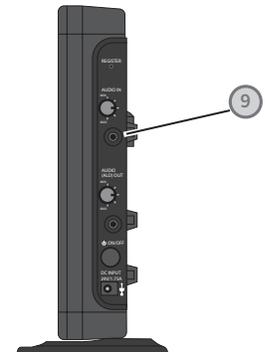

## CHARGE MICROPHONES NIGHTLY

10. Place the Flexmike into the cradle charger. The power button light will glow red and the Mic status light will glow blue. When Flexmike is fully charged, the power button light on the mic will change to green.

For complete operating instructions go to [www.lightspeed-tek.com/RedcatAccess-usermanual](http://www.lightspeed-tek.com/RedcatAccess-usermanual) (or scan the 2D barcode below).

